

TIMEX®

Model T101
**Extra Loud
Alarm Clock**




For additional information, online registration,
and exclusive special offers visit our website:

www.timexaudio.com

For questions or comments regarding this or other products,
please call our toll-free number 1-800-888-4491.
Para instrucciones en Español, llame al 1-800-888-4491.

Controls and Indicators

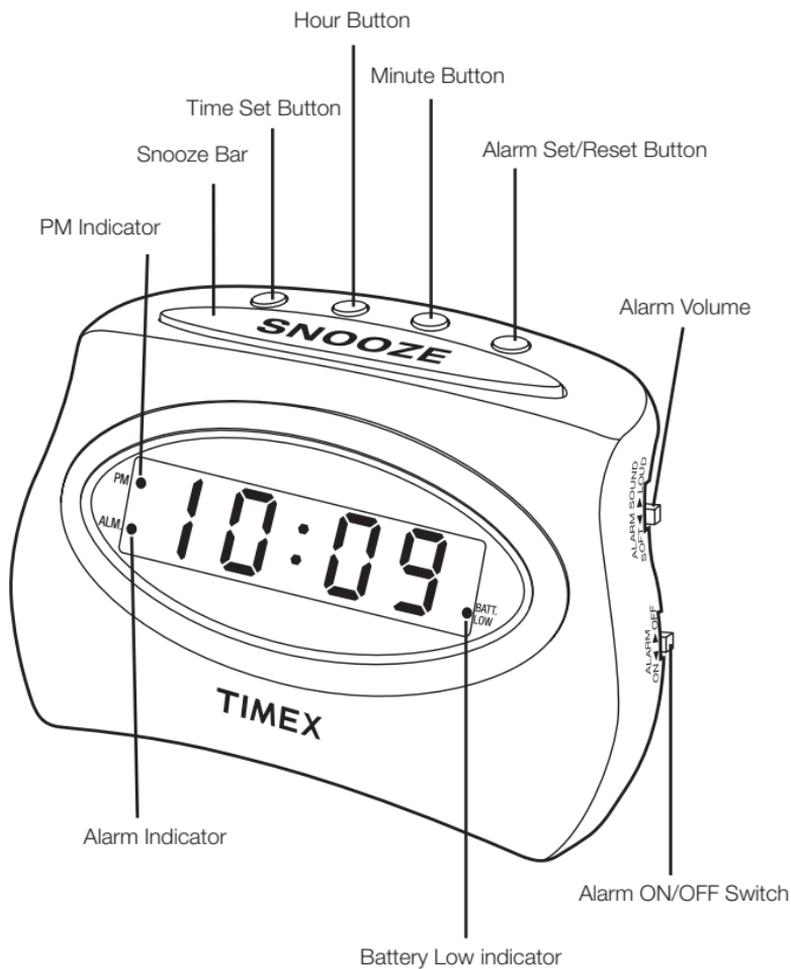


Battery Backup

It is strongly recommended that a 9-Volt battery be installed into the unit, as directed below, in order to activate this product's Battery Backup feature. In the event that the AC cord is disconnected or a power failure or other interruption occurs, the Battery Backup will maintain clock and alarm settings for the life of the battery. Failure to install a battery will mean the loss of all time and alarm settings during power failures or interruptions.

To install the battery:

1. Open the battery compartment cover.
2. Install one 9-Volt battery (alkaline is recommended for longer life), making sure that the large terminal matches to the large outlet.
3. The display's Battery Low Indicator will light when no battery is installed, or when the battery is weak or installed incorrectly.

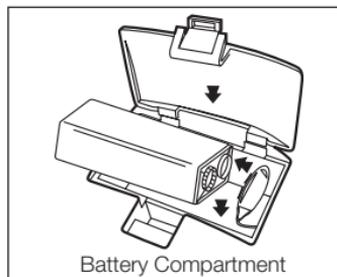

Note: You should replace the battery every six months, or after any extended power outage that could drain the battery power.

Maintenance

- Protect your furniture when placing the unit on natural wood or wood with a lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as benzine, thinner, or similar materials are not recommended, as they may damage the surface of the case.
- If the unit is not to be used for a prolonged period, such as a month or longer, remove the battery to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean it thoroughly and replace the battery.

Setting Clock Time and Alarm Time

Setting Clock Time

1. Press and hold the **Time Set** button while pressing the **Hour** button until the current hour is displayed. Remember to set the time to the correct AM or PM setting. A small dot in the upper-left-hand corner of the display is the **PM Indicator**.
2. Press and hold the **Time Set** button while pressing the **Minute** button until the current time is displayed.

Setting Alarm Time

1. Press and hold the **Alarm Set/Reset** button while pressing the **Hour** button until the desired alarm hour is displayed. Again, remember to set the correct AM or PM setting.
2. Press and hold the **Alarm Set/Reset** button while pressing the **Minute** button until the desired alarm time is displayed.

Operating the Alarm

1. Set the alarm time as indicated in *Setting Alarm Time*.
2. Set the **Alarm Mode** switch to “On.” A small dot will appear in the lower left corner of the clock display, indicating that the alarm has been set and will sound at the time selected.
Note: The alarm will play until it is shut off, or for a maximum of two hours. As long as the **Alarm Mode** switch is set to “On,” the alarm will sound at the set time every 24 hours.
3. After the alarm sounds, press the **Alarm Set/Reset** button to turn off the alarm while automatically resetting it for the following day.
4. To turn off the alarm without automatically setting it for the following day, set the **Alarm Mode** switch to “Off.”

Choosing an Alarm Volume

Choose a soft or extra alarm volume by setting the **Alarm Volume** switch.

Operating the Snooze Feature

1. To operate the snooze feature, press the **Snooze Bar** after the alarm sounds. The alarm will shut off for approximately nine minutes before sounding again. You may repeat this process several times during the two-hour snooze cycle.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead in an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the back of the cabinet.

CAUTION: To prevent electric shock do not use this (Polarized) plug with an extension cord receptacle, or other outlets unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, adhere to all warnings, and always follow the instruction on the unit and in the instructions and service manuals.

- Water and Moisture** - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- Heat** - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- Grounding or Polarization** - This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of your polarized plug.
- Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
- Cleaning** - The unit should be cleaned only as recommended by the manufacturer.
- Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Damage Require Service** - The unit should be serviced by qualified service personnel when:
 - The power supply cord or plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain.
 - The unit has been dropped or the enclosure damaged.
 - The unit does not appear to operate normally or exhibits a marked change in performance.
- Antenna** - Do not connect to an external antenna.
- Non-Use Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
- Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
- If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered. If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department
SDI Technologies Inc.
Timex Audio Products Division
1401 Pullman Drive
El Paso, Texas 79936-7726

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you have questions or comments regarding this or other SDI Technologies products, please call our toll-free number: 1-800-888-4491.

TIMEX is a registered trademark of Timex Corporation the United States and other countries.