

TIMEX®

Model T120

 
***Air Freshener Alarm Clock
with Nature Sounds***




Air Freshener Warmer Unit is compatible with electric air freshener refills like S.C. Johnson & Son's Glade® Plug-Ins®. Glade® Plug-Ins® is a registered trademark of S.C. Johnson & Son, Inc. Neither Timex® Audio Products nor SDI Technologies is affiliated with S.C. Johnson & Son.

CAUTION: Contact with concentrate may cause eye or skin irritation. If contact is made with eyes, flush with water for 15 minutes. If contact is made with skin, wash with soap or water. If irritation persists, consult a physician. Keep out of reach of children. Do not use in small, confined pet areas without adequate ventilation.


Controls and Indicators

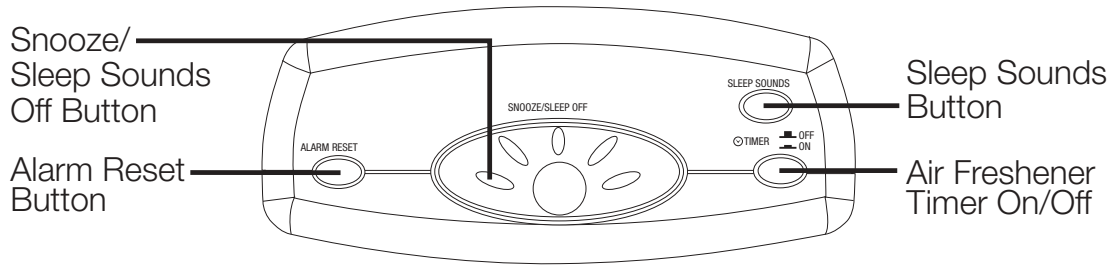

TOP VIEW

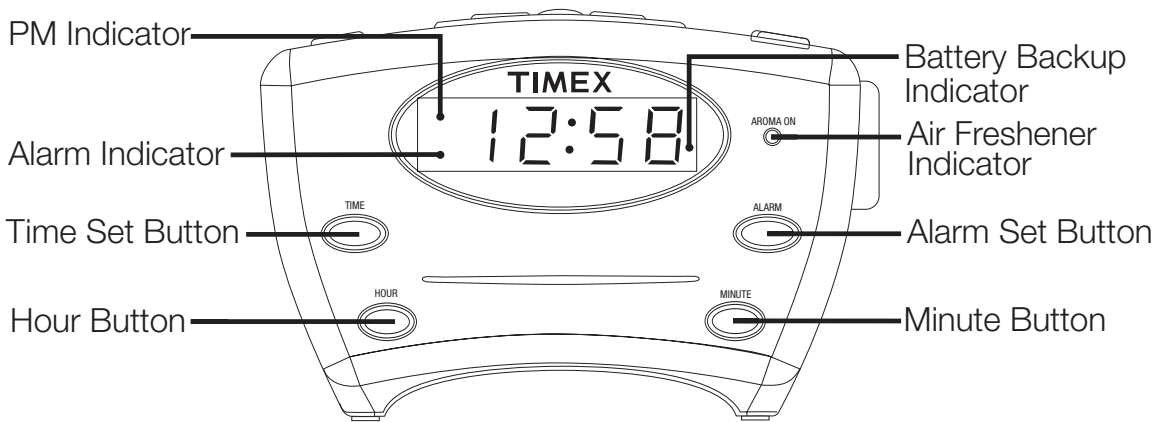 

FRONT VIEW

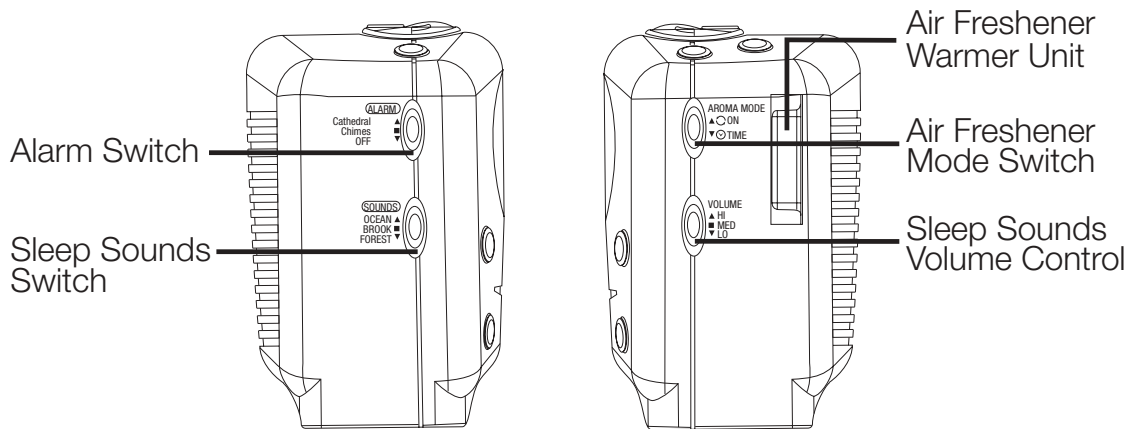 


SIDE VIEWS

Battery Backup Installation

In the event that the AC power cord is disconnected or a power failure or other interruption occurs, the Battery Backup will maintain clock and alarm settings for the life of the battery. During interruptions the display will be blank, but settings will be saved and automatically restored when AC power is again active.

To install the battery:

 1. Open the battery compartment cover on the bottom of the unit.
2. Install one 9-Volt battery (alkaline is recommended for longer life), making sure that the large terminal matches to the large outlet.

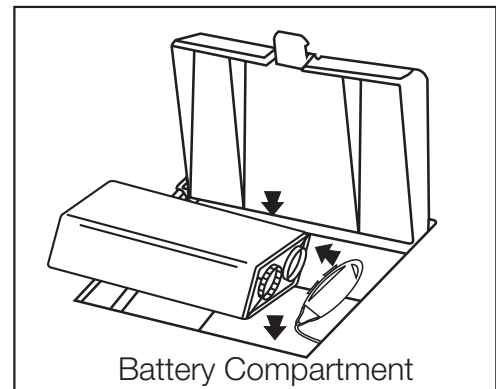

The Battery Backup Indicator LED is located in the lower-right-hand corner of the display. The LED will light when no battery is installed, or when the installed battery is low on power.

Maintenance

- Protect your furniture when placing the unit on natural wood or wood with a lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as benzine, thinner, or similar materials are not recommended, as they may damage the surface of the case.
- If the unit is not to be used for a prolonged period, such as a month or longer, remove the battery to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean it thoroughly and replace the battery.
- Do not remove or puncture clear film protecting the fragrance concentrate. Do not place open fragrance cartridge on finished surfaces.

Setting Clock Time and Alarm Time

Setting Clock Time

1. Press and hold the **Time Set Button** while pressing the **Hour Button** until the current hour is displayed. Remember to set the correct AM or PM setting. A small light in the upper-left-hand corner of the display is the **PM Indicator**.
2. Press and hold the **Time Set Button** while pressing the **Minute Button** until the current time is displayed.

Setting Alarm Time

1. Press and hold the **Alarm Set Button** while pressing the **Hour Button** until the desired alarm hour is displayed. Again, remember to set the correct AM or PM setting.
2. Press and hold the **Alarm Set Button** while pressing the **Minute Button** until the desired alarm time is displayed.

Operating the Alarm and Snooze Features

1. Set the alarm time as indicated in *Setting Alarm Time*.
2. Slide the **Alarm Switch** to the “Cathedral” or “Chimes” position to wake to one of the two alarm bell sounds. These “Gentle Wake” bells feature a gently rising alarm volume. The **Alarm Indicator** will appear in the display’s lower-left-hand corner to show that the alarm has been set.
3. When the alarm sounds, press the **Alarm Reset Button** to turn off the alarm while resetting it for the same wake time the following day, or slide the **Alarm Switch** to the “Off” position to turn off the alarm without resetting it. Even if the **Alarm Reset Button** was pressed, sliding the **Alarm Switch** to “Off” at any time will turn off the alarm.
4. To use the snooze feature, press the **Snooze/Sleep Sounds Off Button** when the alarm sounds. The alarm will turn off for approximately nine minutes before sounding again. You may repeat this process several times during the two-hour alarm cycle.

Sleeping to Nature Sounds With Timer

This model features soothing nature sounds to fall asleep to.

1. Slide the **Sleep Sounds Switch** to your choice of nature sounds: Ocean, Brook, or Forest.
2. Press the **Sleep Sounds Button** to turn on the nature sounds and start the sleep timer. Slide the three-position **Sleep Sounds Volume Control** to the desired level.
3. The sleep timer starts at 59 minutes. To adjust, press and hold the **Sleep Sounds Button**. The display counts down from “59.” Release the button at your desired sleep time. When the display reaches “00” the sounds stop automatically.
4. To turn off the nature sounds at any time before the timer reaches “00,” press the **Snooze/Sleep Sounds Off Button**.

Operating the Air Freshener Warmer Unit

This model comes with one fragrance cartridge designed to fit the **Air Freshener Warmer Unit**. Warmer Unit is compatible with refills like S.C. Johnson & Son's Glade® Plug-Ins®.

Inserting Fragrance Cartridge

 
1. Using the peel tab, slowly remove label from cartridge. Do not puncture film protecting fragrance concentrate.
2. Insert the cartridge into the **Air Freshener Warmer Unit**, with the flat side of the cartridge facing the back of the model.
3. Replace cartridge every 45 days, or when it is dry and cracked.

Using the Air Freshener

The air freshener can be set to disperse continuously or for a limited time period.

1. To set the air freshener to disperse continuously, slide the **Air Freshener Mode Switch** to the “Aroma On” position. Slide switch to “Off/Timer” to turn off the air freshener.
2. To disperse for a one-hour time period, press the **Air Freshener Timer On/Off** button. To turn off the air freshener before the hour is complete, press the button again.

When fragrance is active, the **Air Freshener Indicator** lights.

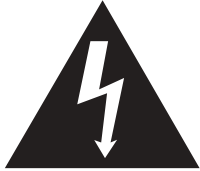

CAUTION

**RISK OF ELECTRIC SHOCK.
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead in an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the bottom of the cabinet.

CAUTION: To prevent electric shock, do not use this (Polarized) plug with an extension cord receptacle, or other outlets unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

This device complies with part 15 of the Federal Communications Commission Rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: The manufacturer is not responsible for any radio or TV interference cause by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

A Consumer Guide to Product Safety

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and printed on the product.

1. **Water and Moisture** — The unit should be kept dry and away from water or other liquids. If liquid is spilled on the unit, or if the unit should fall or be accidentally placed in or on a wet or damp area, immediately unplug the unit.
2. **Ventilation** — The unit should be set up in an area and position that does not interfere with its proper ventilation. Check to see where the ventilation opening is on the product. Do not set up the unit on a bed, sofa, rug, or similar surface that may block the opening. Do not keep the unit in a tight-fitting installation, such as a bookcase or cabinet, which impedes the flow of air through the ventilation openings.
3. **Heat** — The unit should be situated away from heat sources such as radiators, space heaters, stoves, or other appliances (including amplifiers) that produce or emit heat.
4. **Power Sources** — The unit should be connected to a power supply only of the type described in the operating instructions, or as marked on the appliance.
5. **Grounding or Polarization** — This unit is equipped with a two-pronged, polarized alternating-current line plug (a plug having one blade wider than the other). This plug only fits into your power outlet in one direction. This is a safety feature. If you are having difficulty inserting the plug fully into your outlet, try reversing the plug blades; do not force the plug into the outlet. If you are still having difficulty, contact your electrician to replace your obsolete outlet.
6. **Power-Supply Cord Protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to areas at the outlet and where they exit from the unit.
7. **Overloading** — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
8. **Cleaning** — The unit should be cleaned only as recommended by the manufacturer. See the Maintenance section of this manual for cleaning instructions.
9. **Periods of Nonuse** — If the unit is to be left unused for an extensive period of time, such as longer than a month, the power cord should be unplugged from the outlet.
10. **Object and Liquid Entry** — Care should be taken so that objects do not fall and/or liquids do not spill into any openings or vents located on the product.
12. **Attachments** — Do not use attachments not recommended by the product manufacturer.
13. **Damage Requiring Service** — The appliance should be serviced by qualified service personnel when:
 - A. the power-supply cord or plug has been damaged.
 - B. objects have fallen and/or liquid has been spilled into openings or vents.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
14. **Antenna** — The user should not connect an external antenna to the unit.
15. **Servicing** — The user should not attempt to service the unit beyond those methods described in the operating instructions. Any servicing not covered in the instructions should be left to qualified service personnel. Please also see the Warranty Information for more information on product servicing.

This device complies with Part 15 of the Federal Communications Commission Rules. Operation is subject to the condition that the device does not cause harmful interference.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00. Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department
SDI Technologies Inc.
Timex Audio Products Division
1401 Pullman Drive, Suite A
El Paso, TX 79936-7726

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.

TIMEX is a registered trademark of Timex Corporation in the United States and other countries.