
T-231 QUICK START GUIDE


TIME SETTING

Plug unit into working outlet. If the time display blinks "12:00" and the PM indicator lights, *skip to step 4*. Otherwise, continue to step 2.

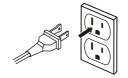




Make sure unit is OFF. To confirm unit is off, press and hold the Dower/Mode/Alarm Reset Button on top right of unit once or twice until OFF appears in display.

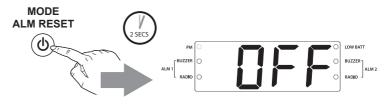


Press and hold the O Clock/
Preset Button on top left of unit for 2 seconds and release once display blinks.

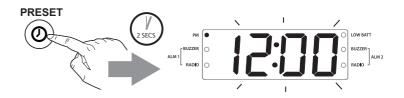


Press the → Hour/ ► Button on top of unit to adjust the HOUR.


NOTE: The PM indicator will light when the hour is set for PM. There is no AM indicator.

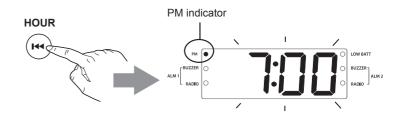

Press the → Minute/ → Button on top of unit to adjust MINUTES.

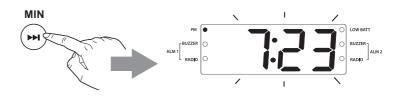


6 Press the ② Clock/Preset
Button to complete time setting.

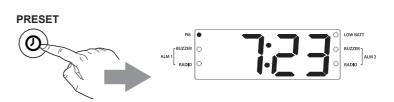


T-231 QUICK START GUIDE

ALARM SETTING:


1 Make sure unit is OFF. To confirm unit is off, press and hold the
Power/Mode/Alarm Reset Button on top right of unit once or twice until OFF appears in display.

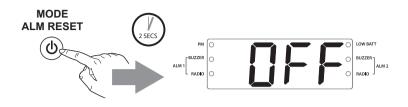

Press and release the Alarm 1
Button (or Alarm 2 Button)
repeatedly as needed to cycle to
desired alarm mode: Buzzer
(default), Radio (last station played)
or Off (alarm is no longer active).

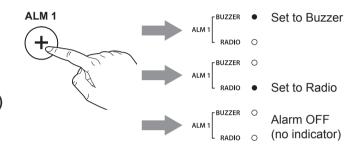


3 Press and hold the Alarm 1 Button (or Alarm 2 Button) on top of unit and release once the display and buzzer alarm indicator blink.

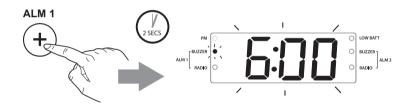


Press the → Hour/ ► Button on top of unit to adjust the HOUR.


NOTE: The PM indicator will light when the hour is set for PM. There is no AM indicator.

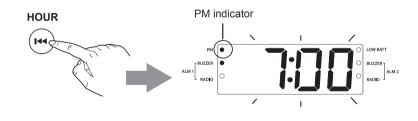

Press the → Minute/ → Button on top of unit to adjust MINUTES.

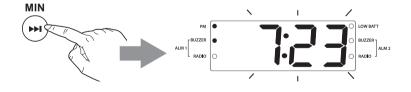

6 Press the Alarm 1 (Alarm 2) Button to complete setting the alarm time.

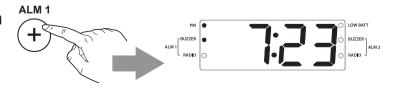

Cancel an alarm setting: Set the alarm mode to OFF by following steps 1 & 2 above.

Note: To *Reset* a sounding alarm (to turn it off and have it come on the next day), press the **Power/Mode/Alarm Reset Button**.